

ACETATE / METAL & COMBINATION FRAMES → CLASSIC TWO BARREL FLEX



OBE offers a system for replacing spring hinge mechanisms in case of breakage. With just a screwdriver, the old mechanism can be unlocked and replaced with a new one. This system is available for nine products, suitable for both metal and plastic frames, as well as the corresponding loose accessories. It enables cost-effective repairs of glasses without the need to replace the entire temple.

DISASSEMBLING




Unscrew the hinge screw!



Insert a flat screwdriver into the slot of the spring hinge. Push down and unlock the mechanism.



Take out the side hinge and the mechanism with the locking device.

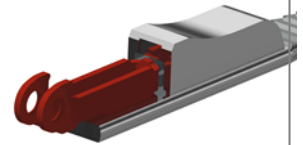


Remove the defective side hinge and mechanism from the housing

REASSEMBLING



Take relevant new side hinge and new mechanism.

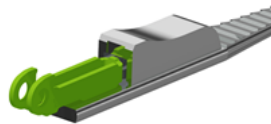

Push in the side hinge in the housing



Insert the mechanism with the locking device pointing upwards. Click it in by pushing it up.



Ready!
Assemble the hinge

APPLICABLE ON FOLLOWING PRODUCTS

NAME	SPRING HINGE	SIDE HINGE	MECHANISM
MINI 3.0	60-44031 / 73-44031.50X	44-44031	60-04031
FLEXUNO 2.7	60-04062 / 73-04062.70X	44-04062	60-04063.030
FLEXUNO 3.0	60-04063 / 73-04063.70X / 73-04063.900	44-04063	60-04063.030
FLEXUNO 4.3	60-04064 / 73-04064.70X / 73-04064.900	44-44064	60-04064.050
WAFFER 3.0	60-04053 / 73-04053.51X	44-44053	60-04053.050
WAFFER 4.0	60-04066 / 73-04066.70X	44-04061	60-04061.050
SPIKE 3.0	60-04053.050 / 73-04054.55X	44-44053	60-04053.050
SPIKE 4.0	60-04066-050 / 73-04066.75X	44-04061	60-04061.050
WAFERELLA 4.0	73-04066.900	44-04061	60-04061.050